

Switching between corn and platform headers

For you guys out there that will be going back and forth between soybean and corn with variable speed feeder houses, remember to slow the feeder down when putting the platform on. Corn headers normally run 460 to 690 RPM while grain headers have a range from 460 to 570 RPM. This is also very important when running a Crary air reel as its gear box is designed to run in the same range as the platform. This box does create heat and will be operating 180° F. Over speeding it will cause it to exceed this temperature and hasten its failure. Please be aware that Crary recommends using a synthetic HD SHC 75-90 weight lube. Another suggestion would be to look through your Crary owners manual for lots of good operation and maintenance tips.

FAIRBANKS INTERNATIONAL

P.O. Box 571 • 75481 Road 435 • Lexington, NE 68850 • 308-324-5553 • 800-248-5523

www.fairbanksintl.com

Service is the foundation of our business